

“LETS GO RC FISHING”

DRIVE YOUR FISHING LINE TO THE FISH!

Attach your fishing line from your fishing pole to the “RC FISHING POLE”™ on your rc boat . Open the bail, (caster) on your rod like your going to cast, then drive your line out with the , (boat) Remote Controller. You can release the line at your fishing spot, with a tug on your line. Bring in the boat, then you reel the fish in with your regular fishing rod.

Or keep you boat in the water, when a fish hits the line automatically disconnects from the “RC FISHING POLE”™.

For small fish, (1-2lbs) like bluegill, and panfish you can tie a piece of line, bobber and small hook, (like #6 hook) through the hole on “The RC Fishing Pole”™ and when a fish is hooked, pull in the fish with the boat.

The ‘RC FISHING POLE’™ is also designed to be removable.

PICKING A BOAT

The Patented “RC FISHING POLE”™ is designed to attach to any Electric or Gas Remote Control boat. A boat over 19-20 inches long is recommended. Usually the bigger the boat the more options, like range and power, and speed. It is recommend you use a boat over 19”, because there might be too much weight on the boat and it will not be balanced enough.

Another advantage of an Electric boat is that you can stop it without the motor continuously running. You can also use a Hovercraft Boat or air boat, great for real weedy areas, the motors are quieter too. Mount The “RC FISHING POLE” in the middle of the boat to keep the boat balanced.

When picking out a boat keep in mind the type of fishing you will be doing and the water conditions. Big boats are better in water, have greater range, and the batteries usually last longer. On bigger boats mounting The “ RC FISHING POLE” on the middle is not necessary, it can be mounted towards the rear. Some boats don’t have sides suitable to mount, so you can mount The “ RC FISHING POLE” on the deck, (top) of the boat. Another thing about boats is that since you are going to use the boat for fishing, you might want to make modifications to the boat that will make fishing better. One thing you could do is add a little silicone sealer around areas you think might leak.

LEGAL

Check to see if it is legal in your state to go RC Fishing. Some states might object to using the boat to pull in the fish, but do allow it using “THE RC FISHIN’ POLE”. If you use the line connectors, this is usually allowed since the line disconnects when the fish hits, and you reel in the fish with your fishing rod.

LIMITED WARRANTY

The contents of this package have been quality control inspected and found free of any defects in material and workmanship. Additionally, FISH FUN LLC. offers the original customer a limited warranty and will replace or repair any product found to be defective providing it is returned prepaid to FISH FUN LLC. in its original package and in an unused state. Defects resulting from misuse, abuse or accident are expressly excluded from coverage under this warranty. This warranty is in lieu of all warranties, ex-pressed or implied, including the implied warranty of merchant-ability. Neither the seller nor manufacturer shall be liable for any loss or damage consequential or direct, arising from the use or inability to use this product. This includes any loss or damage to a remote control boat that arises or occurs with using The “ RC FISHING POLE”™ This warranty applies only to The “RC FISHING POLE”™ not the r/c boat. Some warranties for boats and rc devices exclude using the boat for anything other than its intended purpose. The warranty for the boat should be provided by the boat manufacturer. Since laws vary from state to state, the above exclusions may not pertain to you.

1-877-RC-FISH-2

HTTP://WWW.RCFISHINGWORLD.COM

THE RC FISHING POLE™ IS MADE IN THE USA BY FISH FUN CO.

PARTS LIST

1. The “RC FISHING POLE”:

THE “RC FISHING POLE IS INSERTED INTO THE HOLDERS. IT IS FOR HOLDING THE FISHING LINE FROM THE FISHING ROD TO THE RC BOAT. REMOVE IT BY SQUEEZING THE TIPS AND FIRMLY PULL OUT.

2. The Holder’s:

THE “HOLDERS” ATTACH, (STICK) ON THE REMOTE CONTROL BOAT. THEY HAVE STICKY ADHESIVE ON THEM. WHEN THE PAPER IS PEELED OFF THEY ARE APPLIED ONTO THE BOAT. THEY HOLD THE “RC FISHING POLE” TO THE RC BOAT.

 
3. Rough Connector’s. (White Velcro dots):

ONE ROUGH CONNECTOR IS ATTACHED TO THE END OF THE “RC FISHING POLE”. A SOFT CONNECTOR GOES ON THE FISHING LINE. THEY STICK TOGETHER SO THE RC BOAT CAN TAKE THE FISHING LINE OUT.


4. Soft Connector’s. (Black Velcro dots):

SOFT CONNECTORS GO ON THE FISHING LINE FROM YOUR FISHING ROD. ONCE THE DEPTH OF THE LINE TO BE HUNG FROM THE RC BOAT IS DETERMINED, THE SOFT CONNECTOR IS SQUEEZED ONTO THE FISHING LINE AND FOLDED IN HALF OVER THE LINE. THE FISHING LINE WITH THE SOFT CONNECTOR IS PUSHED ONTO THE ROUGH CONNECTOR ON THE END OF THE “RC FISHING POLE”. THEN THE BOAT IS READY TO DRIVE.

1. RC FISHING POLE™

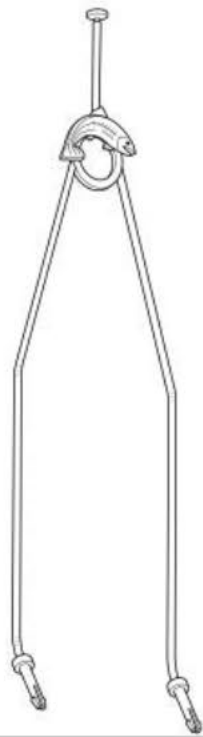

 2. The Holder’s



3. Rough Connector’s



4. Soft Connector’s



RC BOAT FACTS

For Fish Fun Co. RC Boats:

1. Battery Charging Time 5-6 Hours. Longer May Damage .
2. Running Boat Continuously Can Result In Burning Out A Motor.
3. Boat Not Running Properly Usually Indicates The Battery is Low.
4. Do Not Allow The Antenna To Drag In The Water.
5. Replacement propeller’s have a L- for Left and R- for Right.
6. Avoid weedy areas, the boat could get stuck.
7. Avoid water conditions that are too rough, and windy conditions.
8. Only use a small hook when using the boat to pull in fish to avoid the risk of a big fish taking control of the boat.

OBSERVE SAFTEY FIRST!

1. Children should not operate the “RC FISHIN’ POLE” without adult supervision.
2. Keep fingers/hair away from motors.
3. Keep fingers/hair away from Propellers.
4. Keep small parts away from children.
5. Children should wear life vests around water.

Hooked on Rc Fishing? How to Get a Free Rc Fishing Boat!
Upload your Rc Fishing Video on YouTube, give us the link, or mail it to us!



Good Video Tips to Follow

1. Drive the boat out, and bring the fish to shore.
2. Lets see you with your fish and your Rc Fishing Boat!
3. Remember, mention the Fish Fun Website, RcFishingWorld.com

 
* At least 1 minute video.

1. Make sure the sides of the boat are clean of oil or dirt for the best bond when applying the holders on the boat. For smaller boats the holders should be placed towards the middle to keep the boat balanced. On bigger boats you may apply the holders towards the rear of the boat. On other boats, or crafts there may be a more ideal to place the holders, such as the top, that’s up to you.



POSITION OF HOLDERS

2.



PEEL PAPER BACKING

After locating the best spot for the holders, Peel off the paper backing from each holder and press one firmly on both sides of the boat.

3.



INSERT ENDS

 
After the holders are on the boat, push the ends of the “RC POLE” into each of the holders.

4.



Your boat should look like this now with the “RC POLE” attached properly.

HOW TO GO FISHING FOR SMALL OR BIG FISH

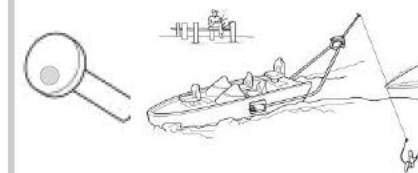

FOR SMALL FISH 1-2 Lbs.
TIE THE PIECE OF LINE, WITH BOBBER, HOOK THROUGH THE HOLE ON THE TIP OF “The RC Fishing Pole”. Then you can use the boat to pull in the fish.



 
FOLD SOFT DOT ON FISHING LINE

FOR ANY SIZE FISH.
USE THE LINE RELEASE PADS AND YOUR REGULAR FISHING ROD. A soft connector, (black) goes on the fishing line. Peel off a round soft connector and firmly fold it over the fishing line. Where you put it will be how much line is under the water. See 1-4 below




PUT ROUGH CONNECTOR ON TIP

1. Peel a round rough, (white) connector and press it firmly on to the tip of the “RC POLE”.

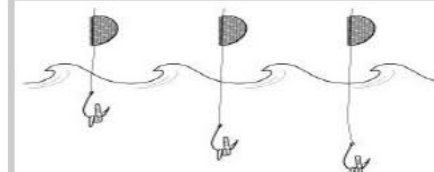

 2. Decide how much line you want under water from the “RC POLE” by where you fold the soft connector on the fishing line.

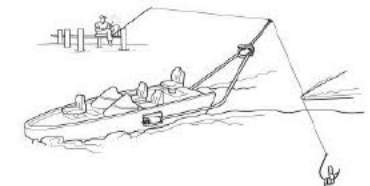


3. Now push the soft -connector from the fishing line on to the rough -connector on the tip of the “RC POLE”. How hard you press it together will determine how easy it comes off when a fish hits.


4. Instead of casting, drive your line out from your fishing pole. Allow line to run freely from your pole. When boat reaches the desired location, pull your line to disconnect it from the boat. Or leave it attached until a fish hits, the line will release itself.

R/C BOAT INTRUCTION

 CHARGE THE BOAT BATTERY 5-6 HOURS

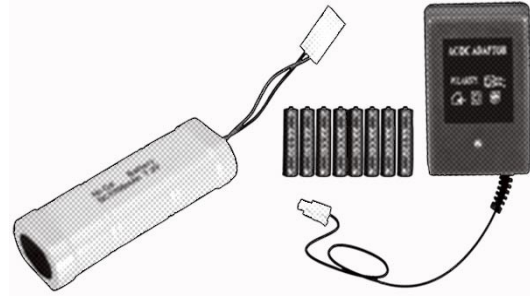

LAY BATTERY PACK IN REAR OF BOAT

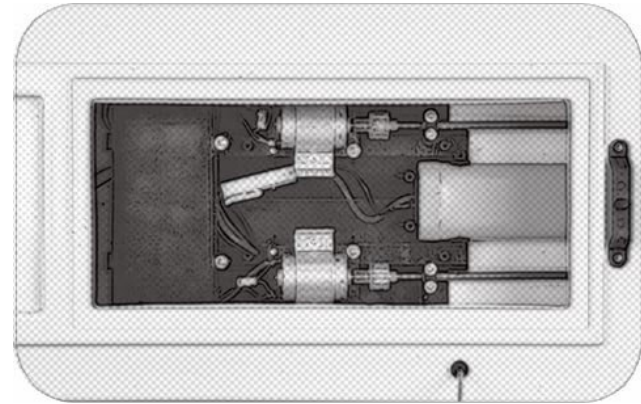 

- 1.) Install the batteries in the bottom of the Remote Controller. The sticker under the cover shows the correct placement of the batteries. Lights should turn on if batteries are inserted correct.
- 2.) Screw the metal transmitter antenna into the remote controller. Extend the antenna out half of the way for testing distance, then fully extended for full distance.
- 3.) Lay the Yellow Boat Battery in the holder inside the hull of the boat, and plug in connectors. (if they do not fit easily then turn the plug around)
- 4.) Slide the plastic antenna with the flag over the boat antenna, (the long wire on the boat). Lightly push the end into the black grommet on the boat. Tie a small knot at the top to keep from slipping off.

BEFORE RUNNING CHECKLIST

- 1.) Lights on Remote Controller?
- 2.) Ni-Cd battery is fully charged, 5-6 hours, and securely plugged in? For best results charge the battery the night before or day of use of the boat. Battery should feel warm after a full 6 hour charge.
- 3.) Hatch's secured?
- 4.) Push boat on-off button to the on position.
- 5.) Is anyone on your frequency in the same area. Two boats with the same frequency will not operate at the same time?

 
Important Safety Instructions

- 1.) Never charge the batteries for more than 5 to 6 hours or you will damage their ability to hold a charge.
- 2.) Do not run your fun boat at full speed for more than 5 minutes as the engines could over heat and become damaged. Always rest the engines after a high speed run.
- 3.) Keep hair and fingers away from motors and propellers.



Propeller Replacement

Each propeller has a letter stamped on it.
*Note-The right propeller nut is removed by turning it clockwise, (turn to the right to remove).

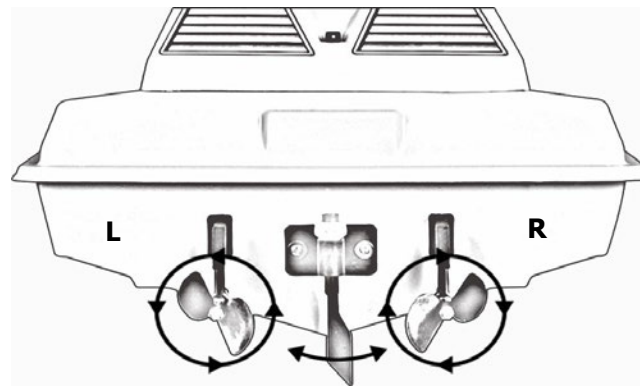


L-Left Propeller

R-Right Propeller

Fix a Motor Sticking

Clean the Motor Shaft

 
1. Find the small vent hole on sides of the motor.
2. Push a small nail or toothpick in the hole halfway in until you feel motor shaft inside.
3. Hold the nail in the hole pushing on the motor shaft, and rotate the propeller by hand 4-5 turns, while you apply light pressure on the motor shaft.

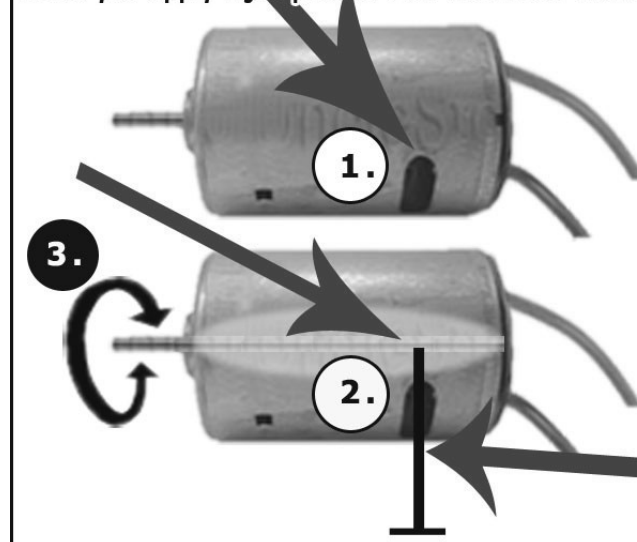

RC BOAT FACTS

For Fish Fun Co. RC Boats:

 1. Battery Charging Time 5-6 Hours. Longer May Damage .
2. Running Boat Continuously Can Result In Burning Out A Motor.
3. Boat Not Running Properly Usually Indicates The Battery is Low.
4. Do Not Allow The Antenna To Drag In The Water.
5. Replacement propeller's have a L-for Left and R- for Right.
6. Avoid weedy areas, the boat could get stuck.
7. Avoid water conditions that are too rough, and windy conditions.
8. Only use a small hook when using the boat to pull in fish to avoid the risk of a big fish taking control of the boat.
9. Tip-Only extend the remote controller antenna out 3/4 so if you drive the boat out of range you can extend the antenna fully for extra range to retrieve boat.
10. When boat slows down then recharge the battery.

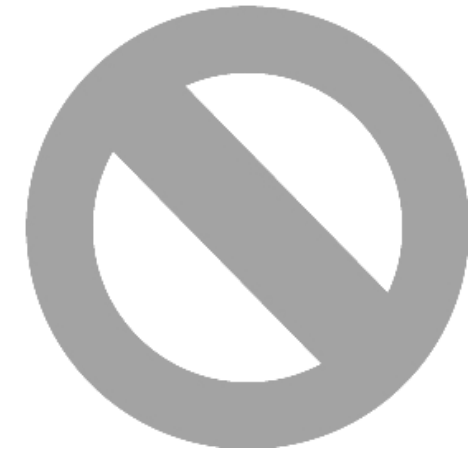

OBSERVE SAFETY FIRST!

1. Children should not operate the "RC FISHN' POLE" without adult supervision.
2. Keep fingers/hair away from motors.
3. Keep fingers/hair away from Propellers.
4. Keep small parts away from children.
5. Children should wear life vests around water.

**READ THESE INSTRUCTIONS!
YOU CAN AVOID SIMPLE TECHNICAL ISSUES.**

BOAT BATTERY CHARGING TIME 5-6 HOURS

8 AA BATTERIES MUST BE PUT IN THE REMOTE CONTROLLER PROPERLY IN ORDER FOR THE REMOTE TO WORK. THREE LIGHTS MEANS THE REMOTE IS ON, AND REMOTE IS READY.

Please call us for any technical issues, as most are usually easy to troubleshoot with our customer support.

For replacement parts, see our Q/A Page at www.RcFishingWorld.com

**Call for Support:
USA: 1-734-502-8796
Toll Free: 1-877-RC-FISH2**